SANI-LAV SOLUMBIA PRODUCTS

Wall Mount Stainless Steel Sink

Model 5048



Columbia does not recommend use with harsh chemicals.


Product Compliance

NSF/ANSI 2 Food Equipment







- ☐ (1) Wall mount sink
- \square (1) Wall-mounting bracket
- ☐ (2) Support brackets
- ☐ (4) Support bracket mounting bolts and washers
- \square (1) Strainer assembly with basket

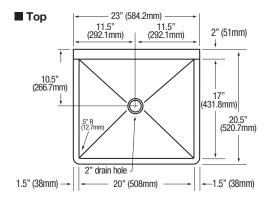


■ Wall Mounting Detail

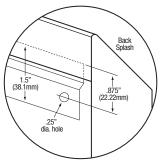

■ Front

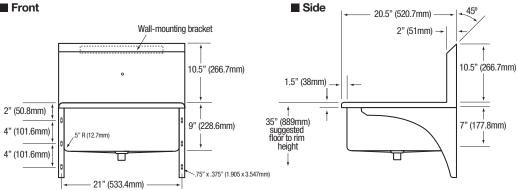

■ Hole Configurations

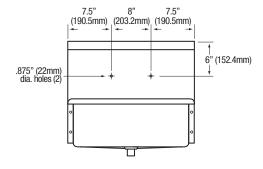

Care and Maintenance

Regular cleaning will preserve the appearance and integrity of the surface. Stainless steel can easily be cleaned and kept stain-free using various methods.

Recommendations

- Clean with an abrasive cleaner like, Bon-Ami or Zud weekly or bi-weekly. Always scrub in the direction of the grain or polish lines. Another option is to use Baking soda. Make sure to rinse well and dry. Illustration A
- Most soaps and detergents contain chlorides, we recommend rinsing the stainless-steel sink with hot water after use, to prevent corrosion. Illustration B
- Regularly dry your sink to prevent water and surface rust marks. Illustration C
- · Do not leave salt in the sink or near a saltwater environment.
- Use a quality stainless steel cleaner and follow cleaner instructions. Wipe along the grain (NOT against). Illustration D

Things to Avoid

- · Avoid harsh abrasive cleaners and corrosive chemicals.
- Avoid abrasive scouring pads, carbon steel brushes and steel wool for cleaning as iron particles left behind can lead to rust.
- Avoid the use of oily rags or greasy cloths when wiping the surface. To avoid water spots, wipe dry after use.

Additional Tips

- Regularly drying your sink works wonders to prevent water and surface rust marks.
- · Wear rubber gloves when working with cleaners to protect your hands.
- · Never mix cleaners. Some products react to create dangerous gases.
- There are thousands of blended or compound cleaners on the market. Users are advised to contact suppliers of solvents for information on their applications on stainless steel.
- · DO NOT USE SOLVENTS in closed spaces or while smoking.
- · Note: Columbia does not recommend use with harsh chemicals.



Illustration A



Illustration B



Illustration C



Illustration D